


SC-001

Sonic Cleaning Brush

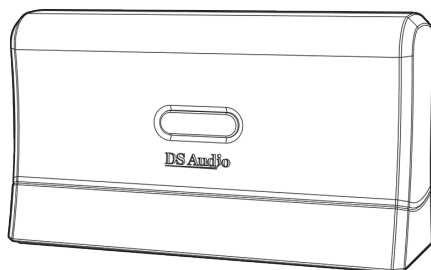


Owner's Manual Warranty Included

DS Audio

Thank you for purchasing the DS Audio SC-001, the world's first record cleaning brush powered by sonic vibration. Please read this manual carefully before use, and keep it for future reference, so that you can enjoy the SC-001 for many years to come.

01 PARTS AND FUNCTIONS

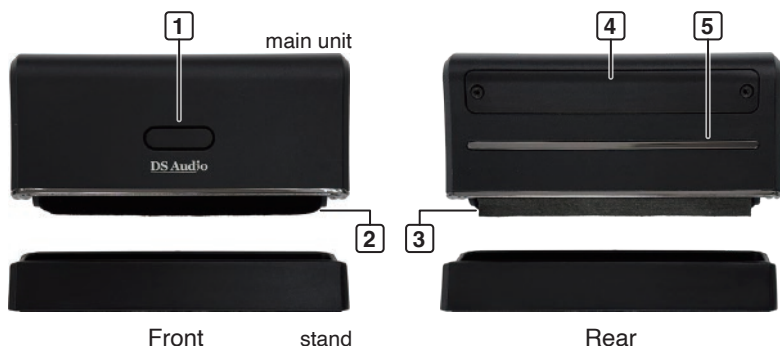

1 Power button

The unit vibrates only while the button is held down; release it to stop.

2 Brush head

The bristles that contact the record surface, vibrating approx. 11,000 times per minute. When the brush head wears out, it can be replaced with an optional replacement brush.

3 Anti-static conductive fibers

Conductive fibers located behind the brush head discharge static electricity from the record surface.

4 Battery compartment

Remove the rear-cover screws with the included hex key, open the cover, and insert two AAA batteries in the correct orientation.

5 Ground bar

The metal bar on the rear of the unit. Touch it with a finger while cleaning; static electricity on the record is discharged through your body.

In the Box

SC-001 main unit / SC-001 stand / Maintenance brush / Hex key (2 mm) / Two AAA batteries / Owner's manual (doubles as warranty certificate)

02 HOW TO USE

- 1 Insert two AAA batteries into the battery compartment, taking care to orient them correctly.
- 2 Start the turntable so that the record is rotating.
- 3 Keeping a finger on the ground bar, gently rest the brush head of the SC-001 on the record surface and press the power button. Keep touching the ground bar throughout cleaning.
- 4 Holding the button down, keep the brush resting on the record surface for approx. 5 seconds per side.
- 5 After use, store the SC-001 upright on its stand. This keeps the bristles from deforming and extends the life of the brush head.

• Checking the Battery Level

When the power button is pressed, the LED on the brush head lights green. As the batteries run low, it turns red; when they are nearly exhausted, it blinks red. Replace with fresh AAA batteries once the LED turns red or starts blinking.

If the unit does not operate, or the vibration feels weak, first check the orientation and remaining charge of the batteries.

• Caring for the Brush Head

Remove any dust from the brush head using the included maintenance brush. Never use alcohol, thinner, other solvents, or record cleaning fluids.

• Replacing the Brush Head

The service life of the brush head varies with usage conditions (record cleanliness, storage, frequency of use), but under normal use it is designed to last for years. Replace the brush head when any of the following occurs:

- The bristles have worn down and become visibly shorter
- The bristles have splayed to one side and no longer return to their original shape
- Dust remains on the record after cleaning
- Dirt remains in the bristles even after cleaning them with the maintenance brush

Replacement brushes are available separately. Please contact your dealer or DS Audio directly.

03 SPECIFICATIONS / SAFETY / WARRANTY

● Specifications

Vibration type	Sonic vibration, approx. 11,000 vibrations / min. (183 Hz)
Power supply	Two AAA batteries
Battery life	Approx. 3,000 record sides per set of batteries (based on 5 sec. per side)
Dimensions	W 129 × D 37 × H 62 mm
Weight	260 g (including batteries, excluding stand)



Safety Precautions

- Do not expose the unit to water.
- Do not drop the unit or subject it to strong impact.
- Do not store the unit in direct sunlight or in hot, humid places.
- Never use alcohol, thinner, other solvents, or record cleaning fluids on the brush head.
- Never allow the brush to touch the stylus of your cartridge.

● Warranty

This product is covered by a one-year warranty from the date of purchase. During the warranty period, DS Audio will repair or replace the product free of charge in the event of failure under normal use. Damage caused by misuse, modification, or natural disasters, and normal wear (such as worn bristles), are not covered. This manual serves as the warranty certificate; please keep it together with your proof of purchase (receipt, invoice, etc.).

DS Audio Digital Stream Corporation

4-50-40 Kamitsuruma-Honcho, Minami-ku, Sagamihara, Kanagawa
252-0318, Japan

Tel +81-42-747-0900 Fax +81-42-747-6011

Web <https://ds-audio-w.biz/> support@ds-audio.biz